

Thank you for downloading from [www.korg.com](http://www.korg.com)!!

This download contains the data to restore your Korg product's original factory data. The uncompressed or “unzipped” download contains a folder named "ESX1\_Preload" which contains a "Factory.esx" preload file. This file will restore all factory preset patterns, samples, song demos and global data. If you need only a portion of the data (i.e. just samples), please refer to your product manual on how to load individual file types.

Here's what you'll need:

- An ESX-1 formatted Smart Media card with at least 19 Megabytes of free space\*
- A USB Smart Media card reader

\*Formatting will erase any existing data on the card. ALWAYS MAKE BACKUPS OF YOUR CUSTOM DATA!

1. Connect the Smart Media card to your computer through the USB card reader. It will appear as a new disk drive in the same window as your existing drives. On a Mac, this would be on the desktop. On a PC, this would be in “My Computer”.
2. Drag the Factory.esx file out of its folder onto the Smart Media card. Do not drag the ESX1\_Preload folder in any way.
3. Properly eject the Smart Media card from your computer.
4. Insert the Smart Media card into your ESX-1.
5. Follow procedures for loading as described in your product manual.

KORG USA